

Montaje para protector de motor



Nota:

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.

Herramientas:

Kit llaves hexágonas

Kit llaves boca fija



Kit Instalado

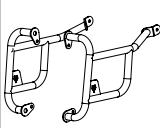







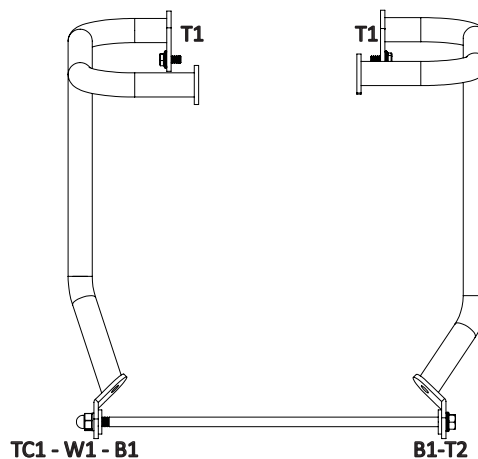
Instalación



- 1- Desmonte el mofle para poder instalar el protector de motor derecho.
- 2- Asegure ambos lados del protector de motor en la parte delantera con la tornillería original de la moto en la parte superior y el T1 en la parte inferior como lo indican la Imagen y el Esquema.
- 3- Instale la parte trasera por medio del T2, TC1, W1 y los y B1 en cada uno de los lados.

El Kit Contiene:

Protectores de motor  Cantidad: 1	Tornillo hexagonal M8 X 15 Inox  T1 Cantidad: 2	Tuerca ciega M10  TC1 Cantidad: 1
Tornillo hexagonal M10 X 380  T2 Cantidad: 1	Buje aluminio 1" D.int 10  B1 Cantidad: 2	Wasa M10  W1 Cantidad: 1



Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.



MASTECH

ROYAL ENFIELD HIMALAYAN 17/UP

Assembly Instructions for engine guard



Note :

Do not tighten the screws until they are completely aligned with the holes.
Before the installation, please verify through the manual that all pieces and parts are complete.

Tools Required:

Hex Allen Wrench Set
Combination Wrench Set



Assembled Kit









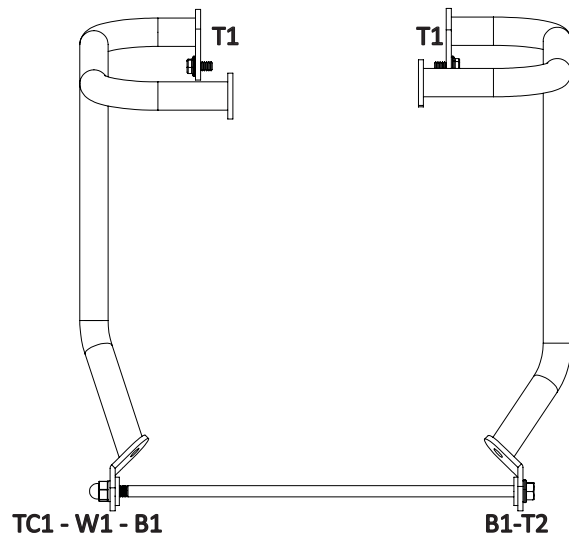
Installation



- 1- Remove the muffler to install right engine guard.
- 2- install both sides of the engine guard with the stock bolts at the top and the T1 at the bottom as indicated in the figure.
- 3- Install the rear through the T2, TC1, W1 and the B1 on the sides.

Parts Included:

<p>Engine guards</p>  <p>Quantity: 1</p>	<p>Hex. flange bolt M8 X 15 Inox</p>  <p>T1</p> <p>Quantity: 2</p>	<p>Cap nut M10</p>  <p>TC1</p> <p>Quantity: 1</p>
<p>Hex. flange bolt M10 X 380</p>  <p>T2</p> <p>Quantity: 1</p>	<p>Buje aluminio 1" D.int 10</p>  <p>B1</p> <p>Quantity: 2</p>	<p>split lock M10</p>  <p>W1</p> <p>Quantity: 1</p>



After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened