

## Montaje para protector de radiador



### Nota:

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.

### Herramientas:

Kit llaves hexágonas

Kit llaves boca fija




## Kit Instalado



## El Kit Contiene:

Protector de radiador

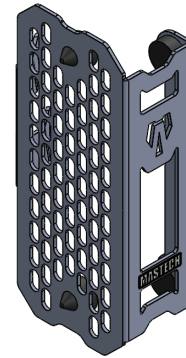

Cantidad:

1

## Instalación



1- Retire los tornillos del radiador como se muestra en la imagen.

2- Instale el protector de radiador con los tornillos originales de la moto.

Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.

## Assembly Instructions for radiator guard



**Note :**

Do not tighten the screws until they are completely aligned with the holes.  
Before the installation, please verify through the manual that all pieces and parts are complete.

**Tools Required:**

Hex Allen Wrench Set  
Combination Wrench Set




### Assembled Kit



### Parts included:

Radiator guard

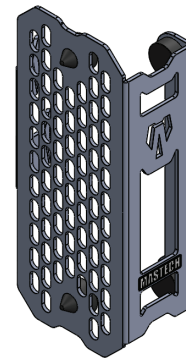

Quantity:

1

### Installation



- 1- Remove radiator bolts as is shown in the image.
- 2- Install the radiator guard with the stock bolts.

*After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened*