

Montaje para protector de faro**Nota:**

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.

Herramientas:

Kit llaves hexágonas

Kit llaves boca fija




Kit Instalado



El Kit Contiene:

Protector de faro

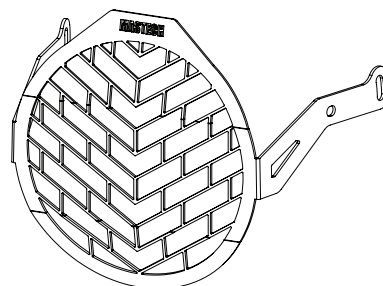

Cantidad:

1

Instalación



1- Retire los tornillos del faro como se muestra en la imagen.

2- Instale el protector de faro con los tornillos originales de la moto.

Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.



MASTECH

ROYAL ENFIELD HIMALAYAN 17/UP

Assembly Instructions for headlight guard



Note :

Do not tighten the screws until they are completely aligned with the holes.
Before the installation, please verify through the manual that all pieces and parts are complete.

Tools Required:

Hex Allen Wrench Set
Combination Wrench Set




Assembled Kit



Parts included:

headlight guard

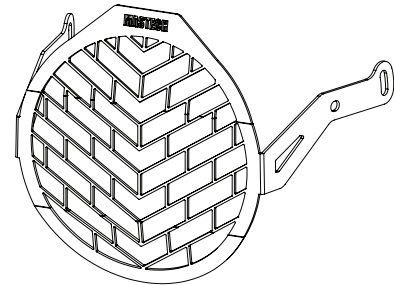

Quantity:

1

Installation



- 1- Remove headlight bolts as is shown in the image.
- 2- Install the headlight guard with the stock bolts.

After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened