

Montaje para protector de tarro líquido de freno



Nota:

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.

Herramientas:

Kit llaves hexágonas

Kit llaves boca fija



Kit Instalado




Instalación



- 1- Retire el tornillo original del tarro de líquido de freno.
- 2- instale el protector como lo muestra el esquema.

El Kit Contiene:

Protector bomba
de freno

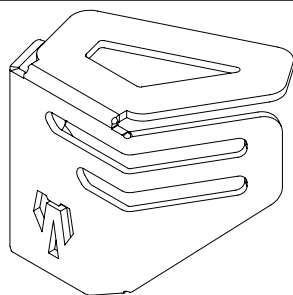

Cantidad:

1

Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.



MASTECH

ROYAL ENFIELD HIMALAYAN 17/UP

Assembly Instructions for brake reservoir guard



Note :

Do not tighten the screws until they are completely aligned with the holes.
Before the installation, please verify through the manual that all pieces and parts are complete.

Tools Required:

Hex Allen Wrench Set
Combination Wrench Set



Assembled Kit




Installation



1- Instal the protector as is indicated in the upper image.

Parts Included:

Rear reservoir guard

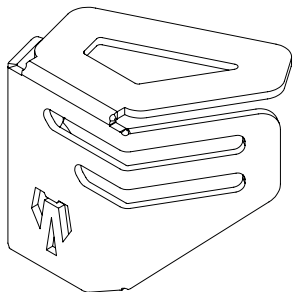

Quantity:

1

After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened

Calle 76 # 52D - 74 / Telefax: (57+4) 448 8428 / Medellín - Colombia
www.mastechno.com