

Montaje de slider para tijera



Nota:

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.

Herramientas:

Kit llaves hexágonas



Kit Instalado











Instalación


1- Ubique las perforaciones mostradas en la imagen y instale la platina incluida en el kit, utilizando la tornillería y bujes también incluidos, teniendo en cuenta el orden que indica el esquema.



El Kit Contiene:

<p>Platina anclaje</p>  <p>Cantidad: 2</p>	<p>Punta plastica slider</p>  <p>Cantidad: 2</p>	<p>Buje aluminio</p>  <p>DEXT 1" DINT 10 ALT. 25 BUJ1</p> <p>Cantidad: 2</p>	<p>Buje aluminio</p>  <p>DEXT 5/8" DINT 8 ALT. 13 BUJ2</p> <p>Cantidad: 2</p>
<p>Buje aluminio</p>  <p>DEXT 5/8" DINT 10 ALT. 13 BUJ3</p> <p>Cantidad: 2</p>	<p>Tornillo socket M8 x 45 + arandela</p>  <p>TORN1</p> <p>Cantidad: 2</p>	<p>Tornillo socket M8 x 30</p>  <p>TORN2</p> <p>Cantidad: 2</p>	<p>Tornillo socket M10 x 30</p>  <p>TORN3</p> <p>Cantidad: 2</p>

2- Instale las puntas plasticas utilizando la tornillería y los bujes incluidos en el kit, como lo indica el esquema.

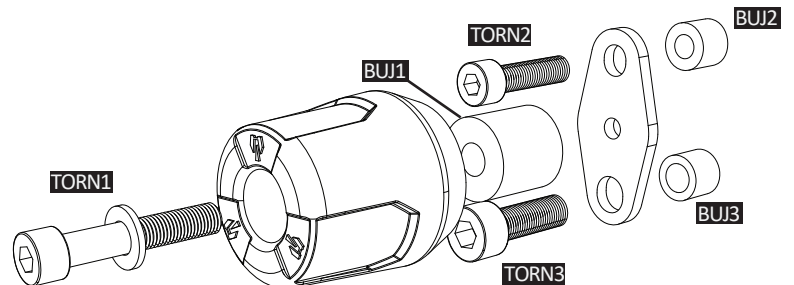

3- Repita los dos pasos en cada uno de los lados

Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.



Assembly instruction for spools

**Note :**

Do not tighten the screws until they are completely aligned with the holes.
 Before the installation, please verify through the manual that all pieces and parts are complete.

Tools Required:

Hex Allen Wrench Set



Assembled Kit











Installation


1- Locate the perforations shown on the image and installed the plate included in the kit, using the screws and bushings also included, taking into account the order indicated on the diagram



Parts Included:

Plate  Quantity: 2	Plastic tips  Quantity: 2	Aluminium bush  DEXT 1" DINT 10 ALT. 25 BUJ1 Quantity: 2	Aluminium bush  DEXT 5/8" DINT 8 ALT. 13 BUJ2 Quantity: 2
Aluminium bush  DEXT 5/8" DINT 10 ALT. 13 BUJ3 Quantity: 2	Socket screw M8 x 45 + washer  TORN1 Quantity: 2	Socket screw M8 x 30  TORN2 Quantity: 2	Socket screw M10 x 30  TORN3 Quantity: 2

2- Install the plastic tips using the screws and bushings included in the kit, as indicated on the diagram

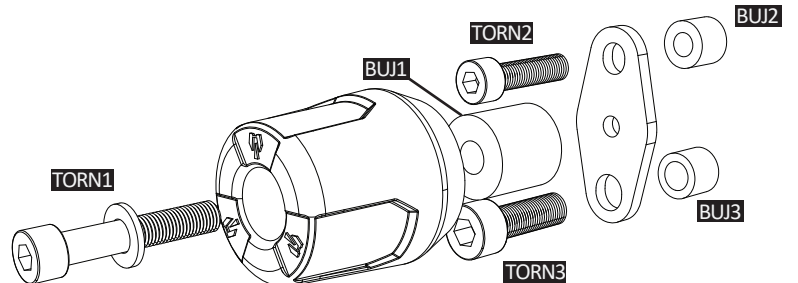

3- Repeat the two steps on each side

After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened