



Montaje Protector Carenaje Superior



Nota:

No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.

Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.


Herramientas:

Kit llaves hexágonas Kit llaves Torx
Kit llaves Boca Fija





Kit Instalado

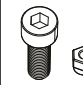






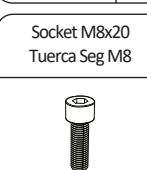
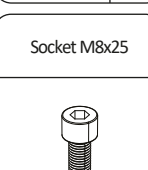

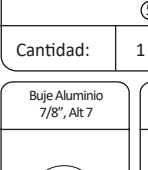
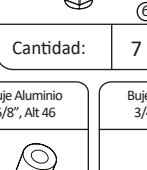

Socket M8x60  Cantidad: 1	Socket M10x30  Cantidad: 1	Tapón plástico para Carenaje  Cantidad: 2	Buje Aluminio 5/8", Alt 8  Cantidad: 1
--	---	--	---

Instalación



1. Instale la Platina (2) en el lado superior derecho del chasis. Utilice la tornillería original de la motocicleta

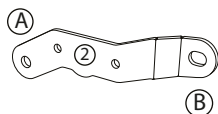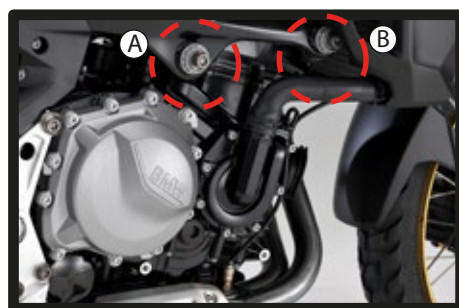

El Kit Contiene

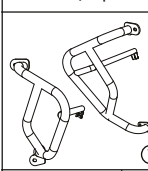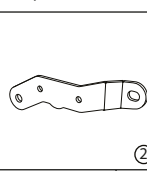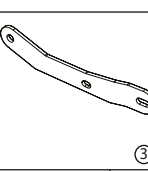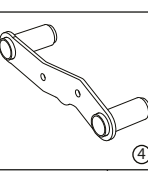Protector Carenaje Derecho/Izquierdo  Cantidad: 1 c/u	Platina Superior Derecha  Cantidad: 1	Platina Inferior Derecha  Cantidad: 1	Platina Superior Izquierda  Cantidad: 1
Platina Inferior Izquierda  Cantidad: 1	Socket M8x20 Tuerca Seg M8  Cantidad: 7	Socket M8x25  Cantidad: 1	Socket M10x20  Cantidad: 1
Buje Aluminio 7/8", Alt 7  Cantidad: 1	Buje Aluminio 5/8", Alt 46  Cantidad: 1	Buje Aluminio 3/4", Alt 35  Cantidad: 1	

2. Instale la Platina (3) en el lado inferior derecho del chasis. Utilice tornillería (8) y (9) y los bujes (14) y (15).

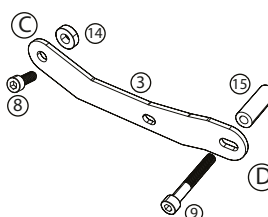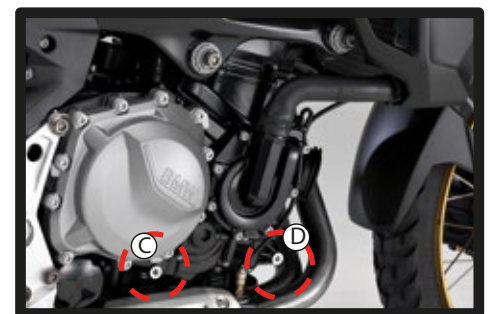

2. En caso de tener instalado el protector de carter Mastech, reemplazar el buje (15) por el (16).

Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.





MASTECH

BMW 750/850 GS



Montaje Protector de Faro

Esp/Spa Ing/Eng


3. Instale la Platina (4) en el lado superior izquierdo del chasis. Utilice la tornillería original de la moto y tapones (11)

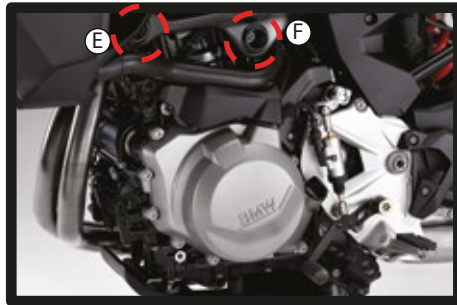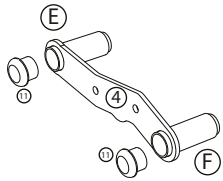



4. Instale la Platina (5) en el lado inferior izquierdo del chasis. Utilice la tornillería (7) y (12) así como la (10) para el otro punto de calapie

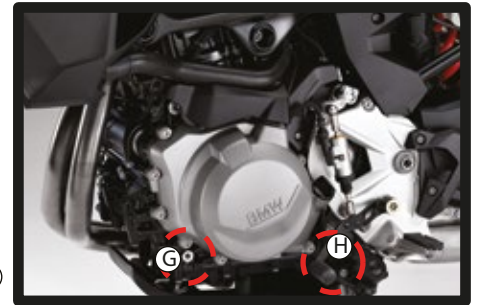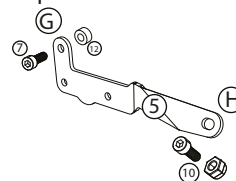

5. Instale el protector de Carenaje Izquierdo sobre las platinas del Kit Mastech ya instaladas en la moto. Utilice Tornillería (6) para los Puntos mostrados en el diagrama (I-J)

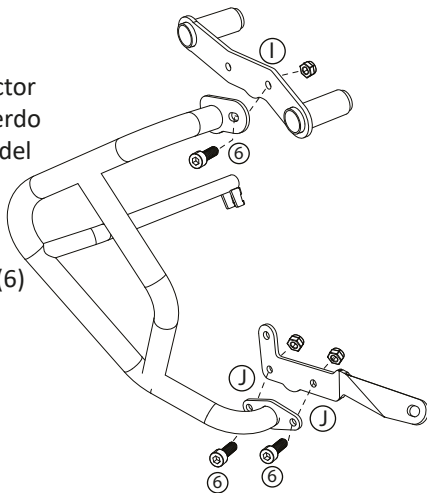

6. Alinear los dos lados instalados en el punto (M) con Tornillería (6). Instale el protector de Carenaje Derecho sobre las platinas del Kit Mastech ya instaladas en la moto, utilice Tornillería (6) para los Puntos mostrados en el diagrama (K-L-M).

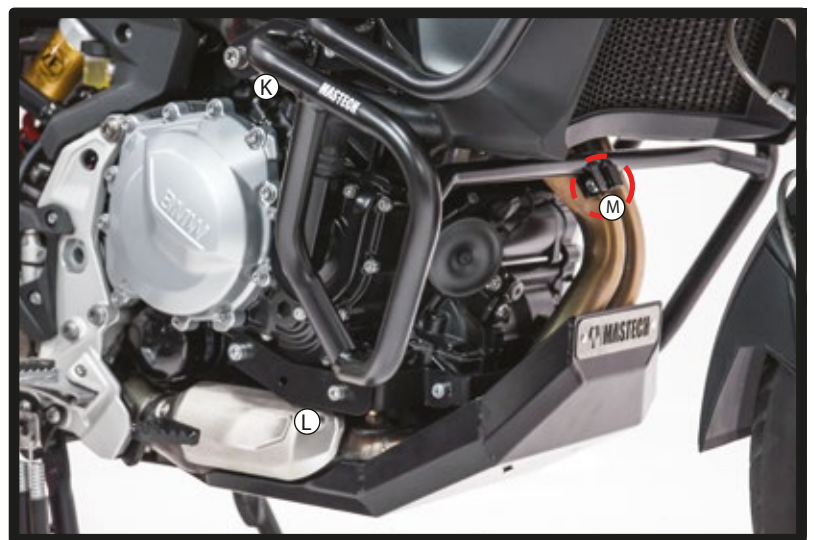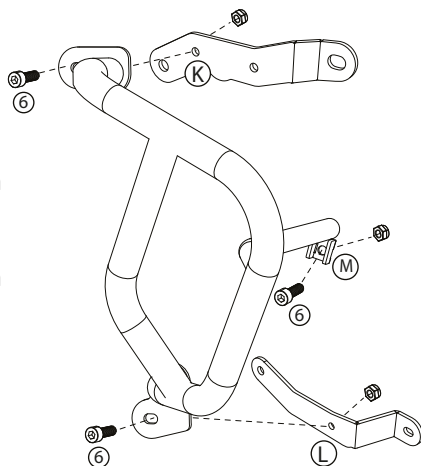

Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.



Assembly Instructions Headligh Protector

**Note :**

Do not tighten the screws until they are completely aligned with the holes.
Before the installation, please verify through the manual that all pieces and parts are complete.

Tools Required:

Hex Allen Wrench Set Torx Wrench Set
Combination Wrench Set



Assembled Kit



Socket M8x60	Socket M10x30	Plastic Cap	Aluminum Spacer 5/8", Alt 8
QTTY: 1	QTTY: 1	QTTY: 2	QTTY: 1

Installation



1. Install the support (2) on the upper right side of the chassis. Use the original motorcycle Screws

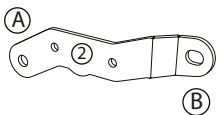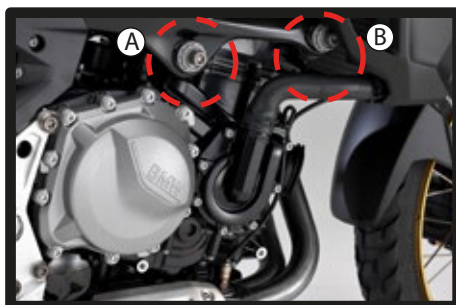

Installation Kit

Lower Crashbar righth side / left side	Upper Righth support	Lower Righth support	Upper Left support
QTTY: 1 c/u	QTTY: 1	QTTY: 1	QTTY: 1
Lower Left support	Socket M8x20 Sec Nut M8	Socket M8x25	Socket M10x20
QTTY: 1	QTTY: 7	QTTY: 1	QTTY: 1
Aluminum Spacer 7/8", Alt 7	Aluminum Spacer 5/8", Alt 46	Aluminum Spacer 3/4", Alt 35	
QTTY: 1	QTTY: 1	QTTY: 1	

2. Install the support (3) on the lower right side of the chassis. Use screws (8) and (9) and aluminum spacer (14) y (15)

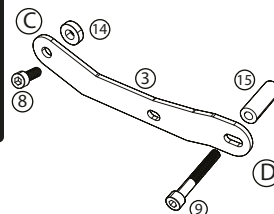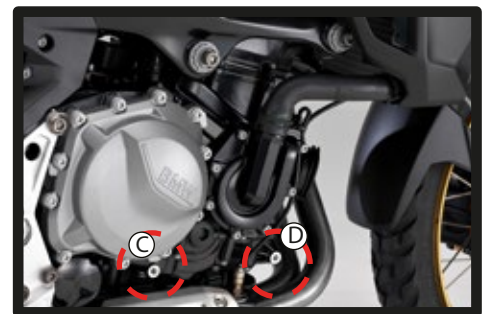



2. In case of take the Mastech Skid plate, replace the aluminum spacer (15) for (16).

After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened





Assembly Instructions Headligh Protector


3. Install the support (4) on the upper left side of the chassis. Use the original motorcycle Screws and plastic caps (11)

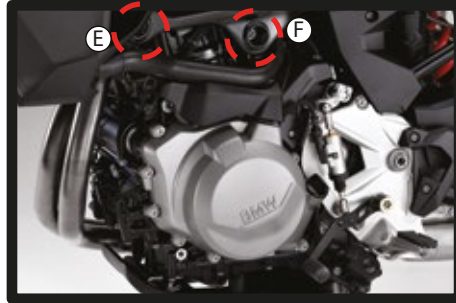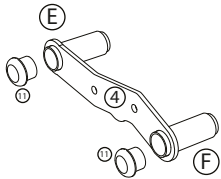


4. Install the support (5) on the lower left side of the chassis. Use the hardware (7) and (12) as well as the (10) for the other assemble point.

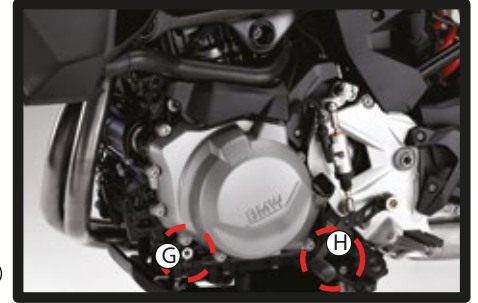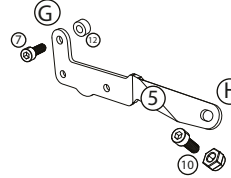

5. Install the Left Side Crashbar on the Mastech Kit Supports already installed on the motorcycle. Use Screws (6) for the Points as shown in the diagram (I-J)

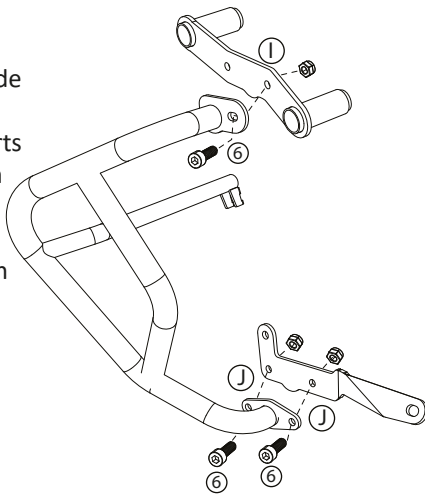

6. At this point, the alignment Steel Spacer (13) must be installed at point (M) to install the crashbars on both sides with kit Screws (6). Install the Right Crashbar on the Mastech Kit Supports already installed on the motorcycle, use Screws (6) for Points as shown in the diagram (K-L-M).

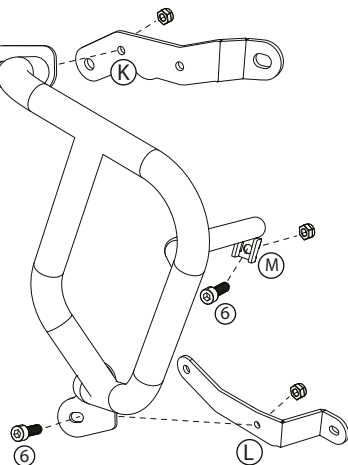

After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened