



MASTECH

BMW F650/F800 GS 08-UP / F700 13-UP

Montaje para Protector de Carenaje

**Nota:**


No apriete todos los tornillos hasta que no estén completamente alineadas todas las perforaciones con respecto a los puntos de sujeción.
 Antes de realizar la instalación, verifique todo el manual e identifique que las partes y las piezas estén completas.








Herramientas:

- 1 Llave Bristol 5mm y 6mm.
- 1 Llave Torx T50 con extension.

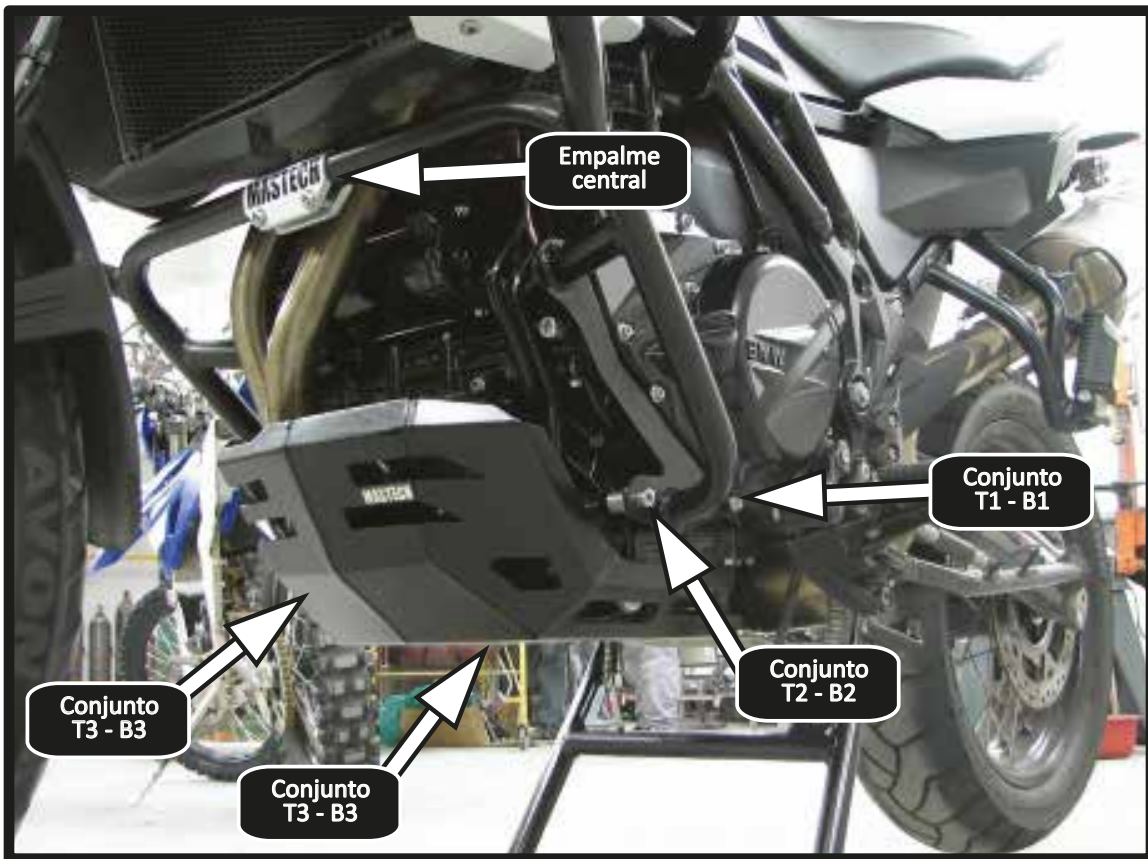

El Kit Contiene:

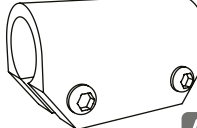

| | | | | | | |
|--|--|--|---|---|---|---|
| Tornillo socket 8m x 25  T1 Cantidad x 1 | Tornillo socket 8m x 40  T2 Cantidad x 1 | Tornillo socket 8m x 50  T3 Cantidad x 2 | Buje de 5/8" por 6 mm x T8  B1 Cantidad x 1 | Buje de 5/8" por 21mm x T8  B2 Cantidad x 1 | Buje de 5/8" por 34mm x T8  B3 Cantidad x 2 | Empalme central MASTECH  A1 Cantidad x 1 |
|--|--|--|---|---|---|---|



MASTECH

BMW F650/F800 GS 08-UP / F700 13-UP

Assembly Instructions for Crashbars/Side Engine Guards

 *Esp/Spa*  *Ing/Eng*

Note:


Do not tighten the screws until they are completely aligned with the holes.
Before the installation, please verify through the manual that all pieces and parts are complete.








Tools Required:

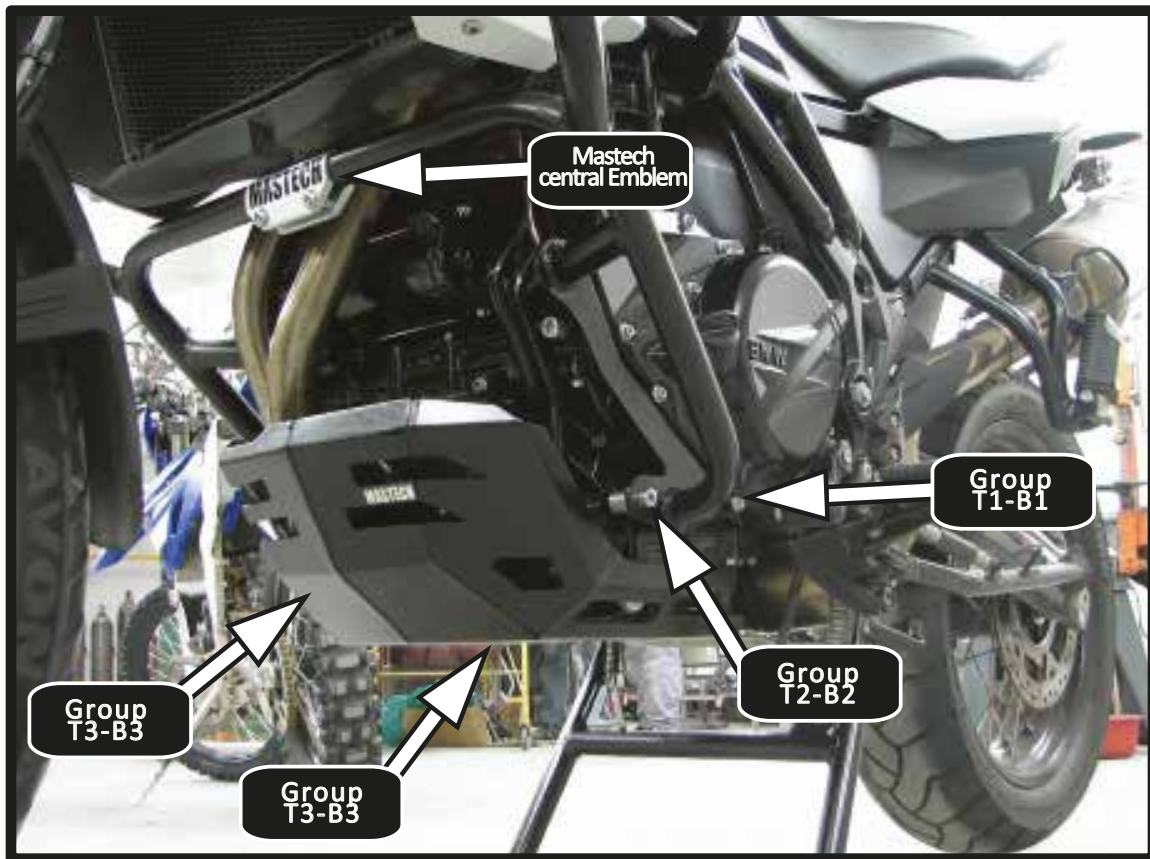- 1 Allen Wrench 5mm y 6mm.
- 1 Allen Key Wrench T50 with extension



Parts Included:




| | | | | | | |
|--|--|--|---|---|---|---|
| Allen Bolt 8m x 25  T1 Quantity x 1 <input type="checkbox"/> | Allen Bolt 8m x 40  T2 Quantity x 1 <input type="checkbox"/> | Allen Bolt 8m x 50  T3 Quantity x 2 <input type="checkbox"/> | Bushing 5/8 x 6 mm x T8  B1 Quantity x 1 <input type="checkbox"/> | Bushing 5/8 x 21mm x T8  B2 Quantity x 1 <input type="checkbox"/> | Bushing 5/8 x 34mm x T8  B3 Quantity x 2 <input type="checkbox"/> | MASTECH Central Emblem  A1 Quantity x 1 <input type="checkbox"/> |
|--|--|--|---|---|---|---|



MASTECH


BMW F650/F800 GS 08-UP / F700 13-UP

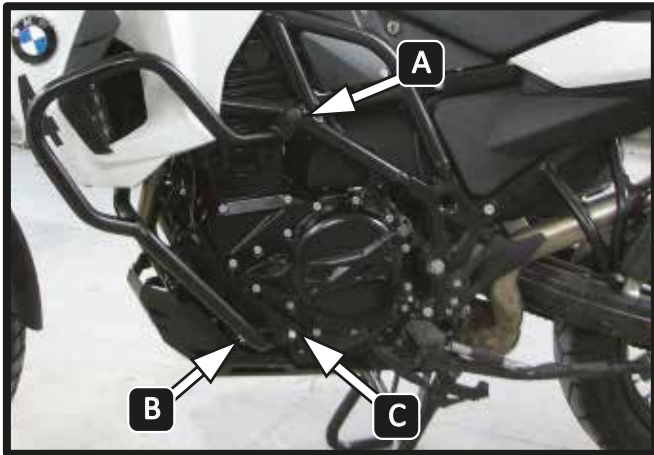

1- Retire los tapones de plástico y el tornillo central del chasis de la moto mostrado en el punto (A) de la imagen.


2- Este procedimiento se realiza en el lado izquierdo y derecho de la moto ya que en este punto se instala un punto del protector de carenaje.

3- En el punto B, instalar conjunto T2-B2 y en punto C, instalar conjunto T1-B1 respectivamente.

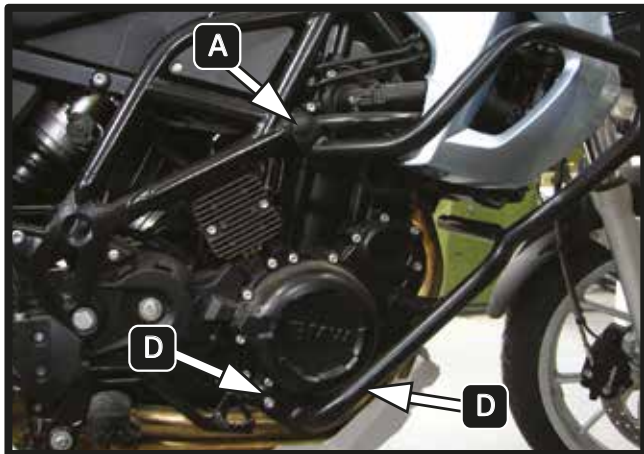

4- Para el lado derecho de la moto instale el conjunto T3-B3 en los puntos inferiores del motor como se muestra en la imagen (puntos D).

5- En el punto E, instale empalme central MASTECH sin asegurar los tronillos.

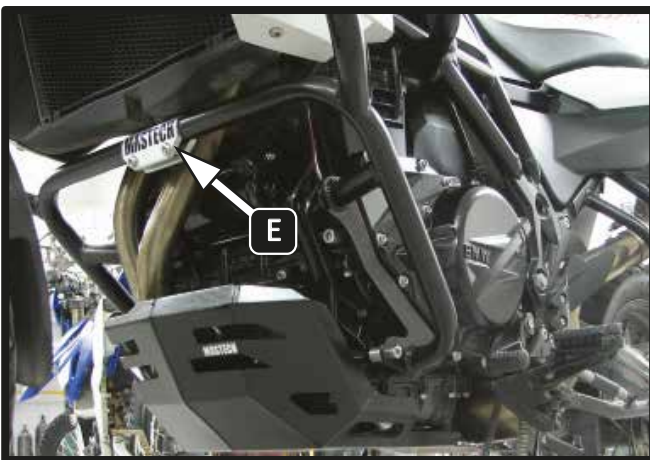


6- Recuerde no ajustar ningún tornillo antes de montar los protectores de carenaje.

Al terminar la instalación de las partes, verifique que estén alineadas y que toda la tornillería esté debidamente apretada; reajuste todos los tornillos.



MASTECH


BMW F650/F800 GS 08-UP / F700 13-UP

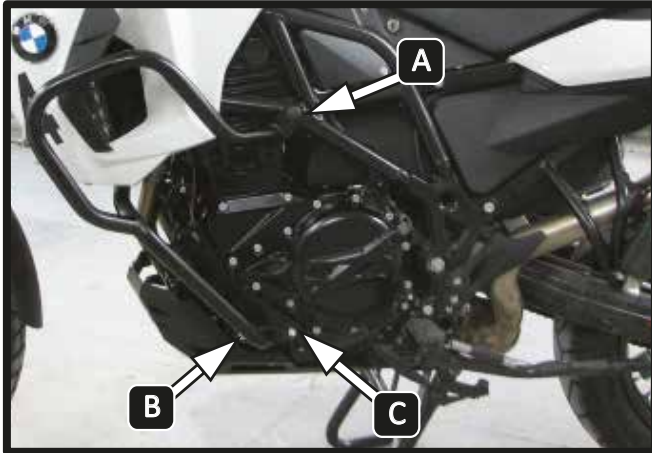

1- Remove the plastic caps and the the center screw of the chassis on the motorcycle shown in point (A) of the image.


2- This is done on both sides of the motorcycle because on this point you will install the crashbars again on both sides of the motorcycle.

3- On point B install the ensemble T2-B2 and on point C, install ensemble T1-B1 respectively.

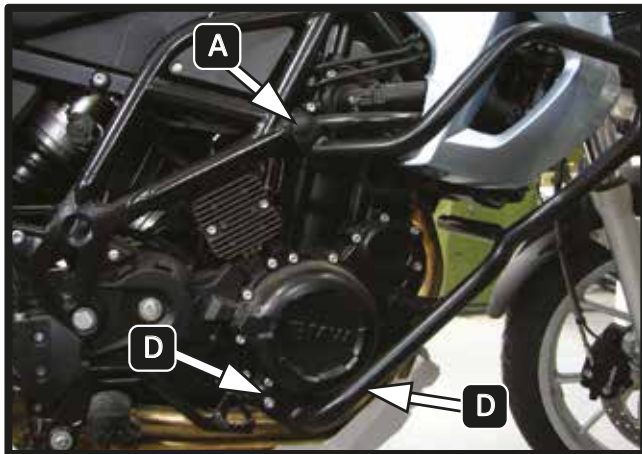

4- On the right side of the bike install the ensemble T3-B3 on the lower points of the motorcycles as shown on point (D) of the image.

5- On point E install the MASTECH emblem in the center of the crashbars.

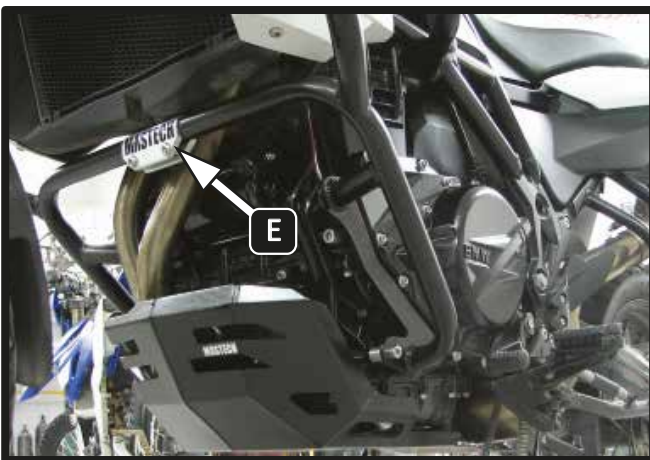

6- Remember not to adjust any bolts before installing the crashbars.

After the installation of the parts, please check that they are aligned and that all the hardware is properly tightened.